



English
Français
Deutsch
Español

連接擴大機

外部唱盤音訊線必須連接到適當的唱頭放大器。
連接方式如下：紅色 = 右聲道，黑色 = 左聲道。
如果您的擴大機沒有內建唱頭放大器，您將需要一個外部唱頭放大器。



 
設置 RB220 唱臂

將秤錘 (A) 安裝在唱臂後方 (B) 上，並調整秤錘的位置，直到唱臂完全平衡，並且針頭懸浮在唱片上方約 1 毫米的高度。此時，唱臂將不會向任何方向傾斜，處於懸浮狀態，為後續調整針壓做好準備。

接下來，可以開始調整針壓，每將秤錘向內旋轉半圈（180 度）即為增加 1 克的針壓。隨附的 Carbon 唱頭的建議針壓為 2 克，所以向內旋轉 360 度後即可完成設定。

旋轉時可利用秤錘上的塑膠塞作為圈數指引。

RB220 音臂的偏壓調整為自動設定。

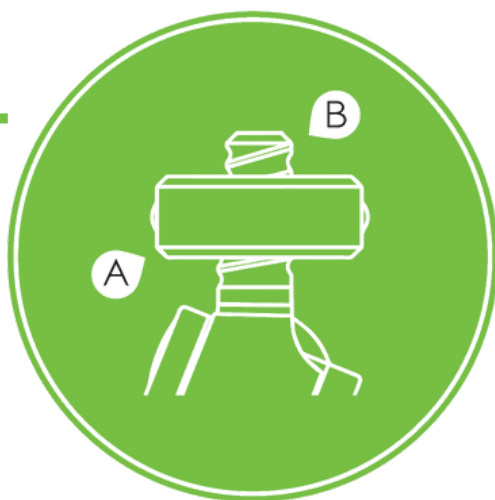

手動更改播放速度

 
只需取下玻璃轉盤，並將驅動皮帶移動到驅動滑輪上的 33 1/3 rpm 或 45 rpm 上，即可更改播放速度。



唱頭對準量規


Planar 2 唱盤已經預裝 Rega Carbon 唱頭並完成唱頭校準，開箱即可播放。

如果您需要更換或升級唱頭，請使用隨附的唱頭對準量規，以及唱頭製造商提供的指南。

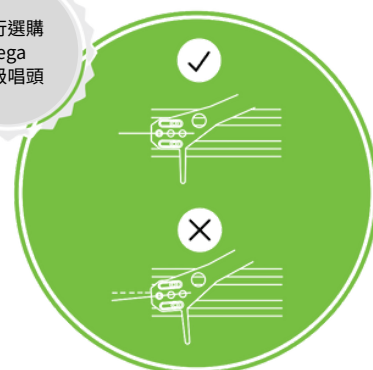

Thank you for purchasing this Rega product.

 Please follow this quick set up guide to ensure optimum performance and perfect operation. Failure to do so may invalidate your warranty. For more information on this product please visit www.rega.co.uk

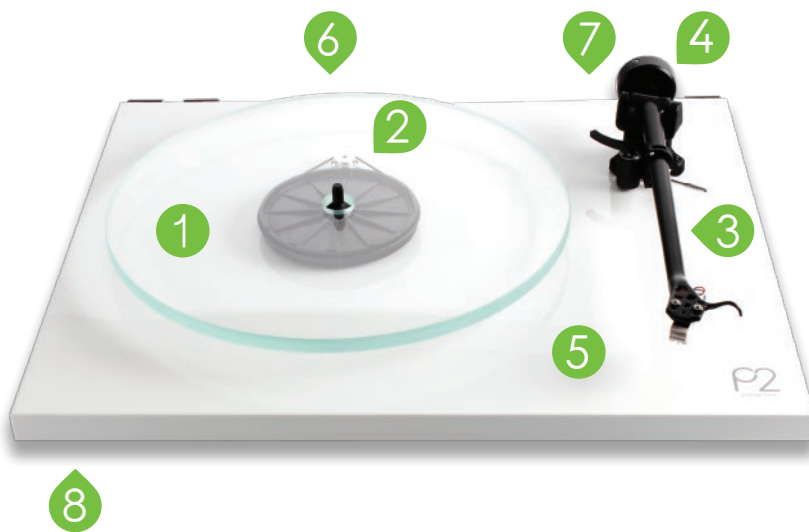

- 1 Platter
- 2 Drive belt & pulley
- 3 Tonearm
- 4 Balance weight
- 5 Plinth
- 6 Power input
- 7 Phono output
- 8 On/Off switch (underneath plinth)

Unpacking the Planar 2

- Always keep the turntable flat.
- Follow the packing guide printed inside the front of the box.
- Save the packaging in case you need to transport your turntable in the future.
- Place the turntable on a rigid level surface.*
- Ensure the drive belt is in place and remove the transport hub card from beneath the sub platter.
- Carefully place the glass platter on the hub and fit the turntable mat.

* The Rega turntable wall bracket is the ideal solution.

Connection to the amplifier

The tonearm external phono leads must be connected to a suitable phono stage.

 
Connect as follows: Red=right channel. Black=left channel. If your amplifier does not have an integrated phono stage you will require an external stage.*

** Rega
Phono stages
are sold
separately.*



Setting up the RB220 tonearm

To set up the RB220 tonearm, screw on the balance weight (A) along its shaft (B) until the stylus is floating 1mm clear of a record on the platter. Tracking force can now be applied, half a turn of the weight (180 degrees) = 1 gram of force. Turn the weight to the suggested force of your cartridge manufacturer's guidelines. The suggested force for the supplied Carbon cartridge is 2 grams (360 degrees). Use the plastic plugs on the weight as a guide. Bias adjustment is automatic on the RB220 tonearm.

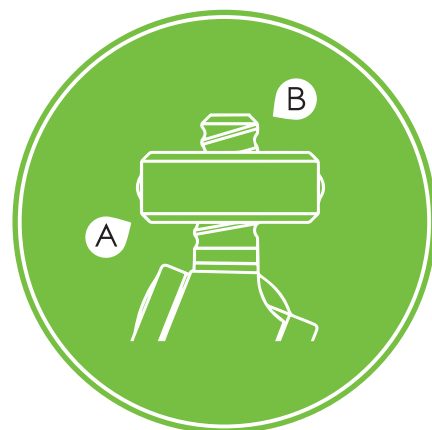

Manual speed change

You can change playing speed by simply removing the glass platter and moving the drive belt between either the 33 1/3rpm or 45rpm wheels of the drive pulley as shown.



Cartridge alignment protractor

The Planar 2 comes with the Rega Carbon cartridge aligned ready for play. If you need to replace or upgrade the cartridge please use the cartridge alignment protractor provided along with the cartridge manufacturers guidelines.**

*** Upgrade
with the Rega
performance
pack.*

