



PW系列使用說明



面板按鍵功能



電源開關

輸入選擇
亮藍燈時為
外部輸入






使用Android 設定連網

1. 搜尋 **DTS Play-Fi** app 並安裝
2. 將PW系列開機，白燈將會快閃約一分鐘
3. 一分鐘後，白燈開始**慢閃**即為等待連線
4. 手機或平板連進Wifi，打開Play-Fi App，點選
右上角[**設定**] -> [**Set Up Play-Fi Device**]跟隨系統指示開始設定

使用Android 設定連網

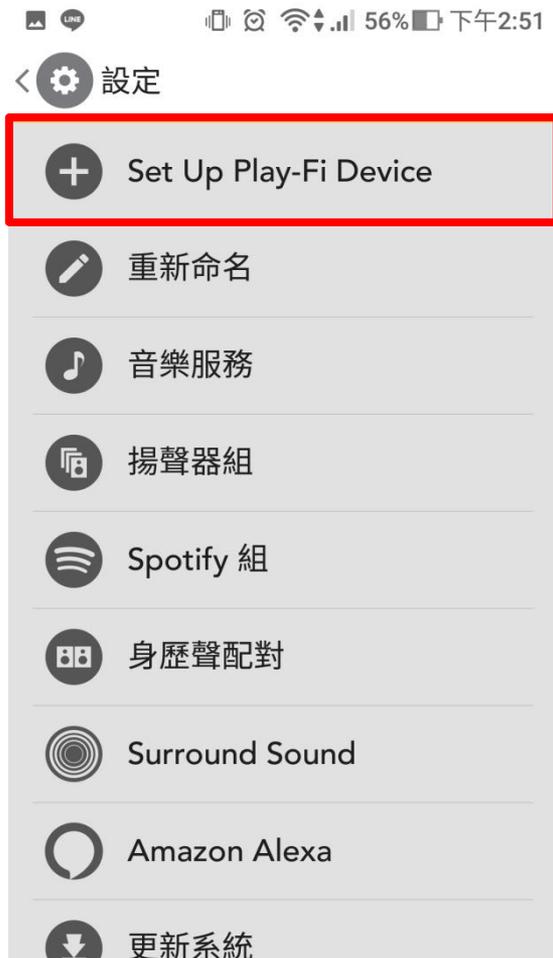



使用Android 設定連網

選擇主機要顯示的名稱

輸入網路密碼

輸入Wifi密碼

隱藏密碼

若要將 Play-Fi 裝置連接到 **soundfield**，請輸入網路密碼，並選擇「下一步」。

下一步

若要將 Play-Fi 裝置連接到另一個網路，請選擇「另一個網路」。

其他網路

正在連接中

現在 Play-Fi 裝置都在嘗試連接到 **soundfield**。
Wi-Fi 指示燈在連接到無線網路上後就會停止閃爍。

Play-Fi Device
發送密碼

選擇名稱

浴室

臥室

廚房

客廳

主臥室

辦公室

自訂名稱

使用iOS設定連網


1. 搜尋 **DTS Play-Fi** app 並安裝
2. 將PW系列開機，白燈將會快閃約一分鐘
3. 一分鐘後，白燈開始慢閃即為等待連線
4. 更改設定，加入**PlayFi**開頭的WI-FI



使用iOS設定連網

- 開啟 Play-Fi App，跟隨系統指示開始設定

設定Wi-Fi

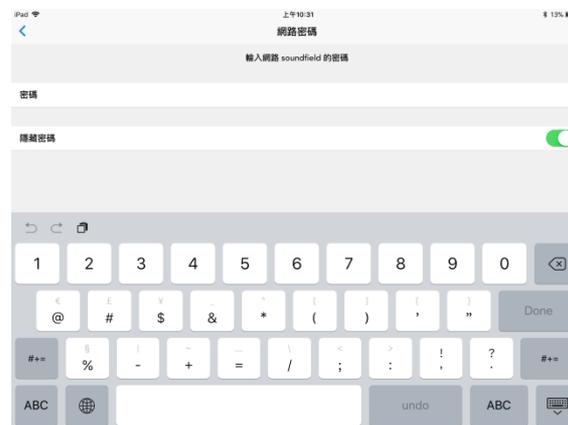

選擇主機要顯示的名稱



App操作



The image shows two screenshots of the dts Play-Fi mobile application. The left screenshot displays the '連接' (Connect) screen with a list of available audio zones. The right screenshot shows the '選擇您的音樂' (Choose your music) screen with various music source icons.

Left Screenshot:


- Top bar: dts Play-Fi, status icons, 56% battery, 下午2:51.
- Connection screen: 連接 (Connect), Hi-Res Audio icon.
- 揚聲器 (Speakers) section:
 - DRX-3.1 (STANDBY) - highlighted with a red box and an arrow pointing to the text '選擇主機 or 按這裡 新增區域' (Select main unit or press here to add new area).
 - PW AMP M9 - In Use by Spotify.
- Volume slider and speaker icon.
- Spotify player: PW AMP M9, album cover 'Secret Garden', track 'Steps' by Rolf Løvland.
- 揚聲器 (Speakers) section: PW AMP M9, 添加 / 移除 (Add / Remove) button.

Right Screenshot:

- Top bar: dts Play-Fi, status icons, KKBox, +, gear icon.
- 選擇您的音樂 (Choose your music) screen:
 - 網路廣播 (Network Broadcast) - highlighted with a red box and an arrow pointing to the text 'KKBox'.
 - KKBOX - highlighted with a red box and an arrow pointing to the text 'KKBox'.
 - 媒體伺服器 (Media Server) - highlighted with a red box and an arrow pointing to the text 'KKBox'.
 - 音樂 (Music) - highlighted with a red box and an arrow pointing to the text '手機內存音樂' (Music stored on phone).
 - QQ 音樂 (QQ Music) - highlighted with a red box and an arrow pointing to the text '手機內存音樂'.
 - SoundMachine (SM) - highlighted with a red box and an arrow pointing to the text 'Spotify'.
 - 音樂 (Music) - highlighted with a red box and an arrow pointing to the text 'Spotify'.
 - Spotify - highlighted with a red box and an arrow pointing to the text 'Spotify'.
 - TIDAL - highlighted with a red box and an arrow pointing to the text 'Spotify'.
- 已連接 (Connected) section: 一樓WREN PF(樓梯口) (1st floor WREN PF (Staircase)).
- Spotify player: PW AM...E 6000, album cover, track '三月的陽炎' by HY CHANCE.

App操作

播放頁面

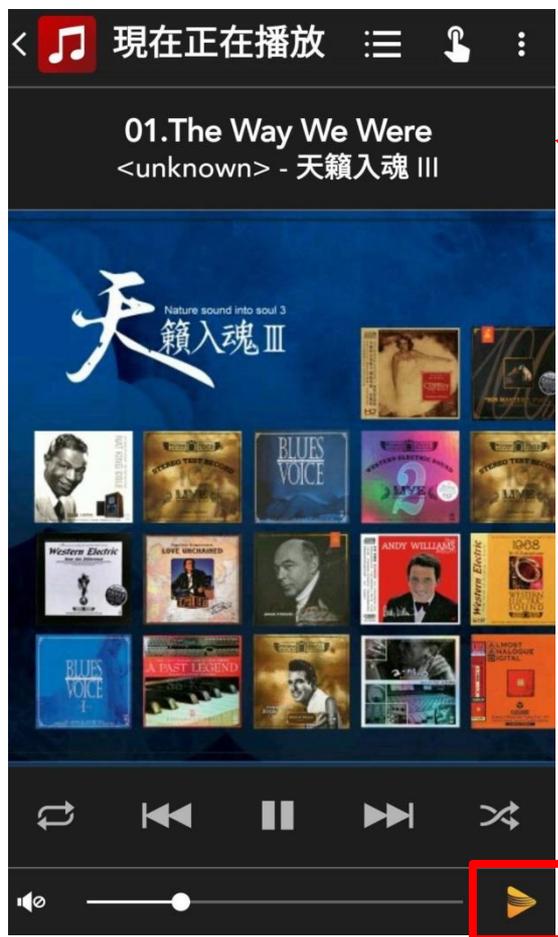

控制頁面



關閉播放

可增加或移
除其他同時
播放的主機

常見問題

- app跳出更新訊息：跟隨系統指示進行更新，過程約3~5分鐘，如等待過久或是更新失敗可將機器重開機再試一次
- 要聽外部音源(如電視)的聲音：按下輸入選擇，亮藍燈時即為外部音源



- 重設機器：長按電源鍵10秒直到WiFi燈與靜音燈同時閃爍後放開，機器即回復初始狀態

